



Air Separator Installation Procedures

(With & Without Strainer)

1. Visually inspect the tank for possible damage which may have occurred during shipment. If damaged please contact Elbi Of America, Inc. prior to installation at 713-674-2900.
2. Install air separator in piping system using the (high) side connection (threaded or flanged) as an inlet. The opposite (low) side connection will be the outlet. We recommend the installation of a drain valve at the bottom of the vessel for periodic blow down and clean out. The very top (dome) fitting is to be utilized with a high capacity air vent (**Our part # CIA-075**) for automatic air removal.
3. Fill tank with system water.
4. We recommend periodic cleaning of the strainer on our air separators with strainer series. Strainers may be accessed via Victaulic or solid flange cover. Prior to removal it is recommended that the unit be vented and contain no internal pressure. Failure to check could result in serious injury.
5. Periodic maintenance on these vessels will provide years of reliable service.
6. Thank you for purchasing an Elbi product.